

Appendix B: Sample Placards for Overfill Devices

DELIVERY PERSON — AVOID OVERFILLS

- An **overflow alarm** is used for overflow protection at this facility.
- Do not tamper with this alarm or attempt to defeat its purpose.
- When the tank is **90% full or is within 1 minute of being overfilled, the overflow alarm sounds and/or a light comes on or flashes.**
- If you hear the alarm sound or see the light on or flashing,
STOP THE DELIVERY IMMEDIATELY!

DELIVERY PERSON — AVOID OVERFILLS

- A **ball float valve** is used for overflow protection at this facility.
- Do not tamper with this device or attempt to defeat its purpose.
- When the tank is **90% full**, or **30 minutes prior to when the product would overflow the tank**, the ball float will activate and the flow rate of the delivery will decrease noticeably.
- **When you notice a decrease in flow rate,
STOP THE DELIVERY IMMEDIATELY!**

DELIVERY PERSON — AVOID OVERFILLS

- An **automatic shutoff device** is used for overfill protection at this facility.
- Do not tamper with this device or attempt to defeat its purpose.
- When the tank is **95% full or before the fittings on top of the tank are exposed to fuel**, the device will activate and slow down and then stop the delivery before the tank is overfilled.
- **When the automatic shutoff device activates,
STOP THE DELIVERY IMMEDIATELY!**